




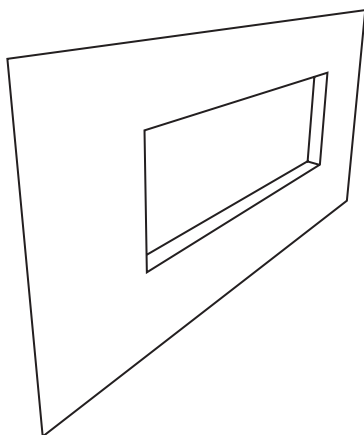


1 – Drill a hole with the corresponding dimensions
(see hole size in the price list) in the drywall.

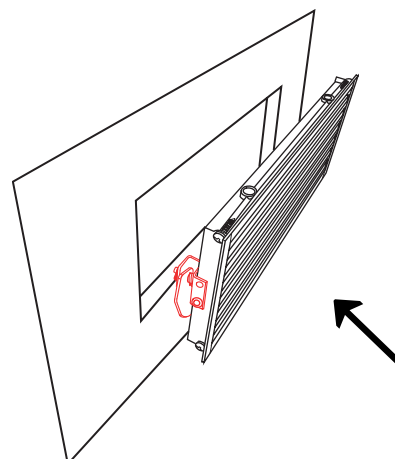


2 – Insert the grille with the
mini latch tabs hidden.

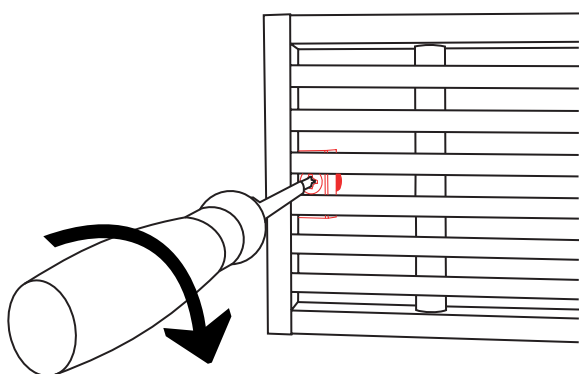

3 – Turn 90° clockwise to rotate
the mini latch tab.

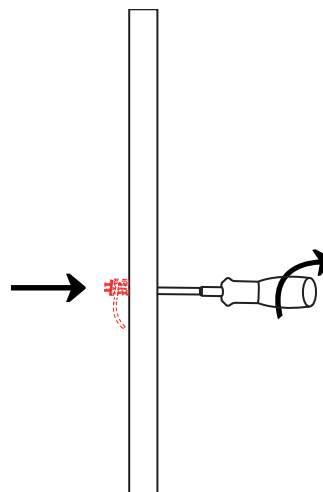

4 – Continue turning the screw clockwise until
the tab stops against the drywall.

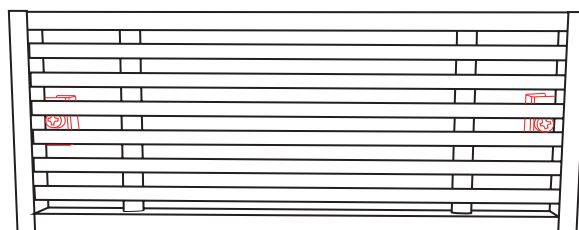

5 – Repeat steps 3 and 4 for each mini latch
until the grille is securely fixed.